
◆ Display

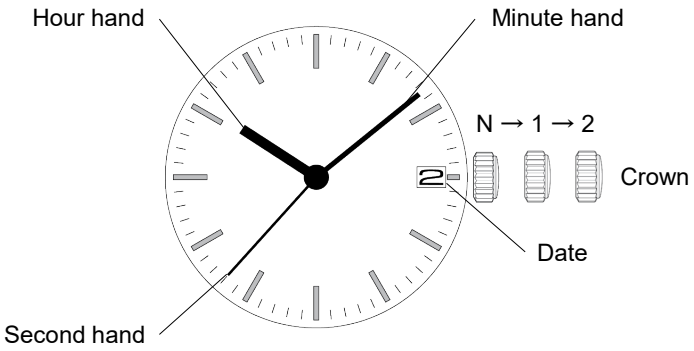

◆ Crown operation

	Crown position		
	N : normal	1 : 1st click	2 : 2nd click
Crown	Free	Turn for date change	Time setting

◆ How to set time

(1) Pull the crown out to the 2nd click position when the second hand is at the 12 o'clock position.

(2) Turn the crown to set the hour and minute hands.
Take a.m./p.m. into consideration when setting the hour and minute hands to the desired time.
- When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

(3) Push the crown back to the normal position.

◆ How to set date

(1) Pull the crown out to the 1st click position.

(2) Turn the crown to set the date.
- Do not set the date between 9:00 p.m. and 1:00 a.m..

(3) Push the crown back to the normal position.

Tips : When the date change during daytime, it happens when a.m./p.m. is wrongly set. Advance the hour hand by 12 hours.

◆ Power depletion warning function

When the battery nears its end, the second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible.
- The watch remains accurate while the second hand is moving at two-second intervals.

Note : The availability of this function is different depending on the caliber.